elfa® Door & Wall Rack System Assembly Instructions

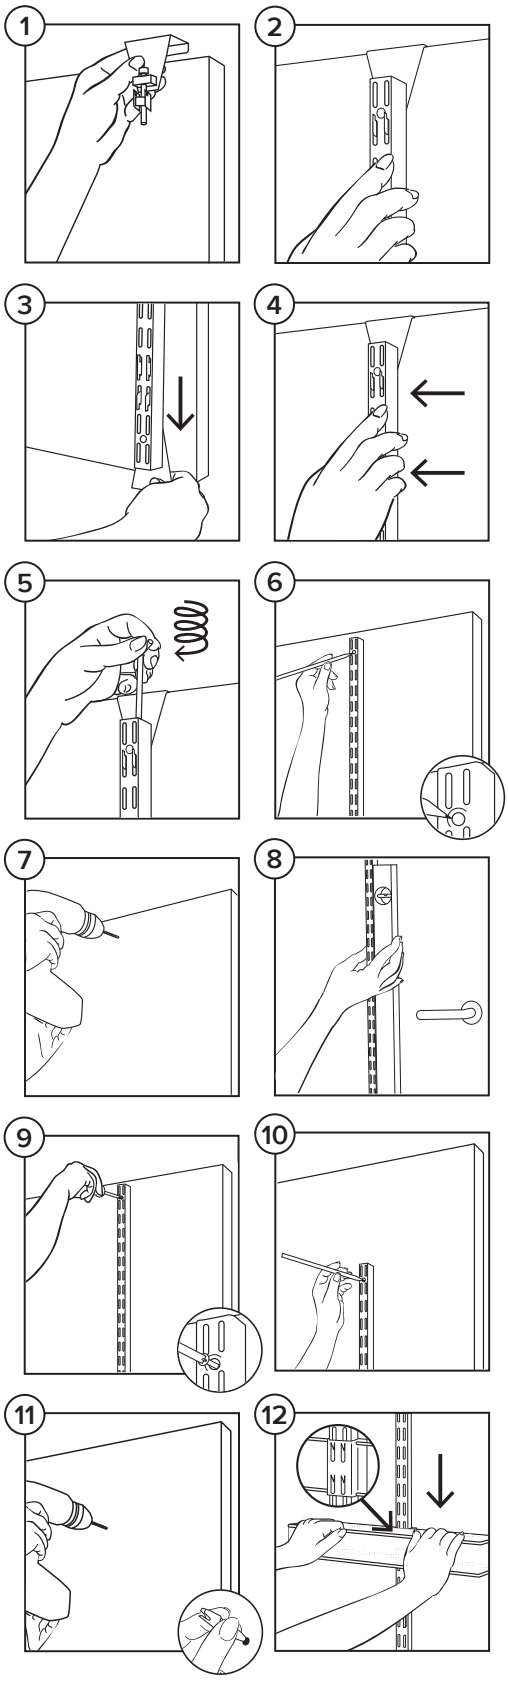

Tools needed: For Door – Allen wrench (included) and level.
For Wall-Mounted – pencil, drill or screwdriver, and hardware.

CHOOSING HARDWARE

- If not using the overdoor hooks, please ask for the best installation hardware for your specific needs.

Attach Standard to the Door

1 Place the shorter hook (that features the screw) over the top of the door.

2 Fit the second set of slots on the Standard over the hook.

3 Attach the longer hook to the Standard under the bottom of the door. Pull down to lock it in position. The bottom hook should not be tight against the door.

4 Adjust the Standard until it is square to the floor.

5 Use the included Allen wrench to tighten the top screw.

Install in a Solid Door

6 Position Standard on door and mark screw placement.

7 Drill a pilot hole with a 1/10"/2.5mm drill bit.

8 Make sure Standard is square to the floor.

9 Screw Standard to the door.

Install in a Hollow Door

10 Position Standard on door and mark screw placement.

11 Drill hole using a 1/4"/7mm drill bit and insert Anchor. Position Standard square to the floor. Insert screw into Anchor and tighten.

Add Baskets

12 Align the tabs on the back of Basket or Utility Board with the slots on the Standard; pull down to lock in place.

ONLY AT The Container Store®

©2021 The Container Store Inc. All rights reserved. 51322 9/21